



GAMESIR T1s

WIRELESS CONTROLLER

English

Bei Bluetooth Verbindung bitte beachten:
Den Anroid-Modus starten Sie mit dem
gleichzeitigen Drücken des “Home” & “A” -Buttons

Den Apple-Modus starten Sie mit dem
gleichzeitigen Drücken des “Home” & “Y” -Buttons



We hope this manual answered any questions you may have had,
If you have any further questions, please contact us:

 GameSir Facebook: <https://www.facebook.com/myGamesir>

 Customer Service: cs@gamesir.hk

 For More Support: <http://www.gamesir.hk>

 
Model No: GameSir-T1s



QUICK REVIEW GUIDE FOR USER MANUAL

PRODUCT OVERVIEW

1.Check and charge your controller :

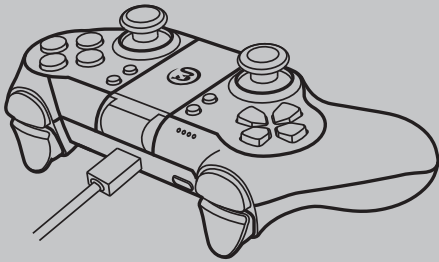

2.Connecting the controller to your devices :



Bluetooth 4.0



2.4Ghz USB Dongle



Wired

 
3.Download T1s supported games :



 
Happy Chick



GameSir World

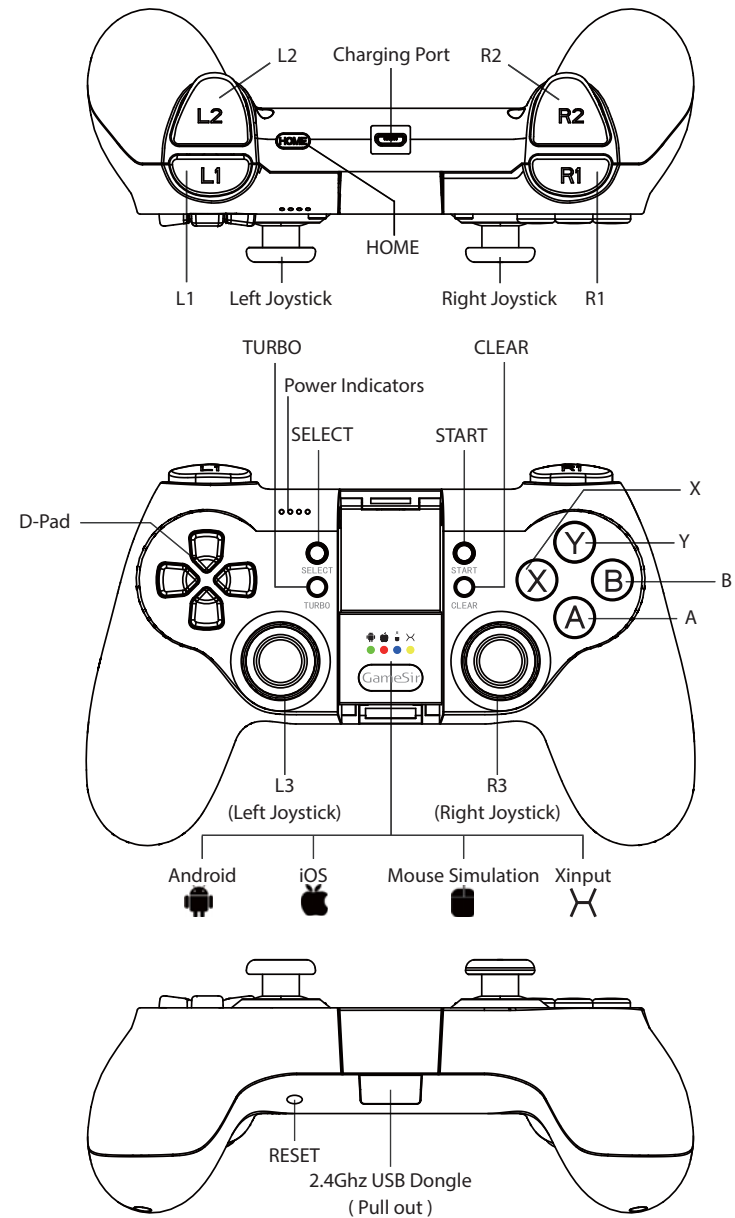

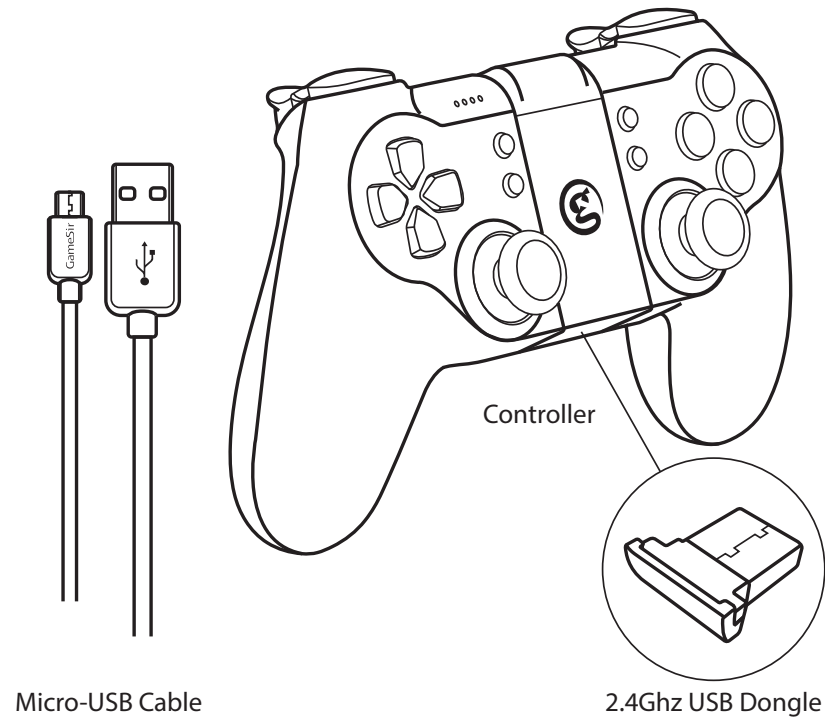


PACKAGE CONTENTS



System Requirements: Android 4.0 or later, Windows 7 or later

Hardware compatibility: Android Smartphone / Android Tablet / NVIDIA Tablet / Android TV box / Windows PC / Samsung Gear VR / PlayStation 3

Connections:  Bluetooth 4.0  Wired  2.4Ghz USB Dongle

MORE INFORMATION



GameSir.hk - Support



Facebook - Mygamesir



GameSir.hk-Where to buy



 
GameSir.hk-Product-Manual

Warning


1. Avoid strong vibration, do not disassemble, refit or repair on your own.
2. Do not keep in humid, high temperature or soot place.
3. Avoid water or other liquid in gamepad, it may affect the performance of the gamepad.
4. Keeping away from fire, the built-in battery has danger of explosion.
5. Charging voltage is USB 3.7-5.5V DC supply (normal Android smart phone charging power can be used)
6. Children should be under adult's supervision to use this product.

CHECKING AND CHARGING THE CONTROLLER

Before getting started, check the remaining power of your T1s at first, press the "Home" button next to the L2 button of your T1s, the four blue LED lights will flash in turn and each LED light represents 25% of the power. If your T1s is not fully charged, we recommend that charge your T1s to full at first.

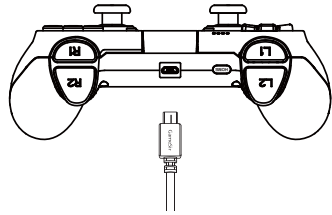

 It is recommended that charging the controller for 2 hours by plugging in the USB cable (provided in the box) – plug one end of the cable in your T1s and plug the other end into a powered USB port. Remember, you can use your T1s while it's charging, but it is not recommended.

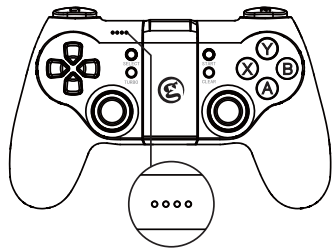


Your T1s controller is built with a Lithium Ion rechargeable battery. During charging, four LEDs will give you the charging status:

While the T1s controller is charging, the four blue lights will flash in turn.

When the T1s is fully charged, the four blue lights will stay on.

 If you want to turn off the gamepad, press the "Home" button for 5 seconds.

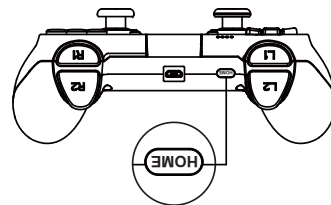

T1s HIGHLIGHT FEATURES

Brightness adjustment of "XYAB" button lights

 
When your T1s is connected successfully to any of your devices, hold down "L2+R2+R3" simultaneously, and press UP/DOWN button of D-Pad to increase/ decrease the brightness of "XYAB" buttons. There are 4 levels of brightness degree in total.

Auto fire function

TURBO is semi-automatic, it creates one or more continuous button press.

CONNECTING ON ANDROID (TABLETS / PHONES)

If this is your first time turning on your T1s, hold down the "A" button and "HOME" button simultaneously for 2 seconds, the "A" button will start flashing in green. It means that the controller is ready to be connected to your Android Tablets or Phones. To pair the controller, go to your Android devices and follow the User Interface flow below: Settings>Turn on Bluetooth>Search for new devices>"GameSir-T1s" will display on the screen. Click to connect via Bluetooth. If your T1s is paired and connected, the T1s will shock slightly and the "A" button will stay on green. The "B" button will start flashing in red, when you hold down "Select" and "X", the mouse icon will appear on your screen, and the Mouse button will stay on.

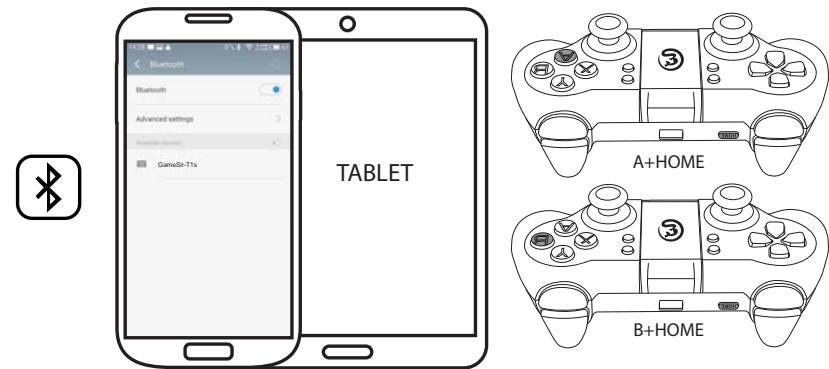


The Android devices can also be connected if you press "B" and "HOME" button simultaneously. The function of "A" + "HOME" and "B" + "HOME" mode is totally the same, the first difference for those two modes is that few Android Smartphones can only recognize "B" + "HOME" mode. Most other Android Smartphones can recognize both "A" + "HOME" and "B" + "HOME". The second difference is that, if you want to get the icon of mouse appears on your screen, you need to press "A" + "HOME" at first, press "Select" + "X" after that. You can not get the icon of mouse after you press "B" + "HOME".

Please note that the controller will remember your last connection, if this is your second time to connect T1s to the same Android Phones, and your T1s is not been connected to other devices between the first time and the second time, there is no need to turn on the Bluetooth again for the second time, hold down the "HOME" button of your T1s for 3 seconds, the controller will be paired automatically.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu. If you do not know if the game is controller compatible, go to www.gamesir.hk and find "GameSir World" column.

CONNECTING ON ANDROID TV BOX

 You can connect your T1s on Android TV BOX via 2.4Ghz USB dongle, Bluetooth 4.0 and USB cable as follows:

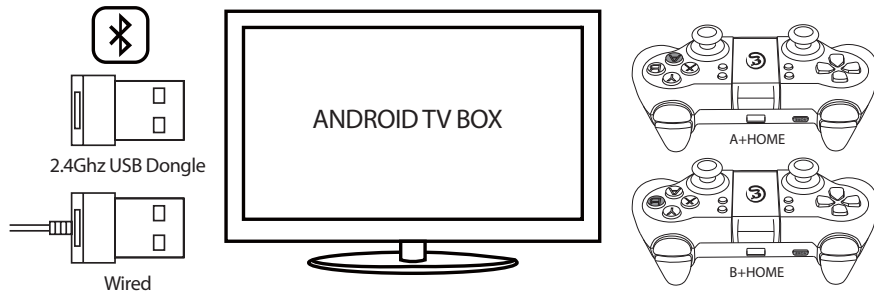

Connecting via 2.4Ghz USB Dongle: If this is your first time to connect your T1s to Android TV Box, pull out of the 2.4Ghz USB dongle from the front side of the controller, inserting the 2.4Ghz USB dongle into the USB port of Android TV box, hold down **(A)** and **(HOME)** button of your T1s 2 seconds, if the controller is connected successfully, the "Ⓐ" button light of your T1s will stay on and the game controller will shock slightly. The "Ⓐ" button will start flashing in red, if you press "SELECT" and "X" button simultaneously, the Mouse icon will appear on your TV screen, and the "Ⓐ" button light will stay on at that time. Press "SELECT" and "X" button again to exist Mouse Mode.

You can also hold down **(B)** and **(HOME)** button for 2 seconds to connect your T1s to Android TV box, all the connection steps are totally the same with **(A)** and **(HOME)** buttons, the only difference is that the "Ⓑ" button will not flash any more in this mode.

Connecting via Bluetooth 4.0: If this is your first time to connect your T1s to Android TV box, hold down the **(A)** button and **(HOME)** button simultaneously for 2 seconds or hold down the **(B)** button and **(HOME)** button simultaneously for 2 seconds, the "Ⓐ" button will start flashing in green. It means that the controller is ready to be connected to your Android TV box. To pair the controller, go to your Android TV to open the Bluetooth and search, "GameSir-T1s" will display on TV screen, click to connect via Bluetooth. If your T1s is paired and connected, the T1s will shock slightly and the "Ⓐ" button will stay on. The "Ⓐ" button will not flash any more when you press **(B)** and **(HOME)** button at first.

 
Wired Connection: The controller can also be connected successfully via USB cable. Hold down the **(A)** button and **(HOME)** button simultaneously for 2 seconds. Take out the USB cable included in your package, plug one end of the cable in your T1s and plug the other end into a USB port of the Android TV box. Your T1s will be connected easily and quickly in that way. The "Ⓐ" indicator will stay on.

Please note that the controller will remember your last connection, if this is your second time to connect the same TV box via 2.4Ghz USB Dongle or Bluetooth 4.0, and your T1s is not been connected to other devices between the first time and the second time, you can hold down the **(HOME)** button of your T1s for 3 seconds, the controller will be paired to your TV box automatically.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu. If you do not know if the game is controller compatible, go to www.gamesir.hk and find "GameSir World" column.

CONNECTING ON WINDOWS PC

The Windows PC can be connected via 2.4Ghz USB dongle and USB cable.

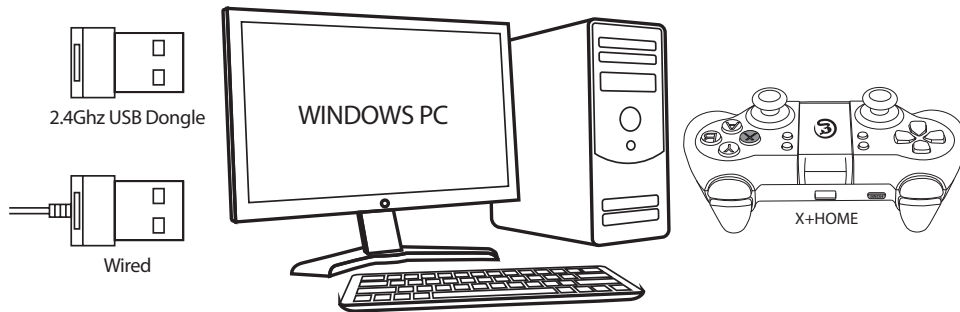

Connecting via 2.4Ghz USB Dongle: If this is your first time to connect your T1s to your Windows PC, hold down “X” and “HOME” button of your T1s, pull out of the 2.4Ghz USB dongle from the front side of the controller, inserting the 2.4Ghz USB dongle into the USB port of your Windows PC, if the controller is connected successfully, the “X” button light of your T1s will stay on and the game controller will shock slightly.

 
Wired Connection: If this is your first time to connect your T1s to your Windows PC, hold down “X” and “HOME” button of your T1s, take out the USB cable included in your package, plug one end of the cable in your T1s and plug the other end into a USB port of the Windows PC. Your T1s will be connected easily and quickly in that way. The “X” button light of your T1s will stay on and the T1s will shock slightly.

Please note that the controller will remember your last connection, if this is your second time to connect the same PC via 2.4Ghz USB dongle, your T1s is not been connected to other devices between the first time and the second time, and your 2.4Ghz USB dongle stays connected to your PC from last time, you can hold down the “HOME” button of your T1s for 3 seconds, the controller will be paired to your Windows PC automatically.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu.

CONNECTING ON PLAYSTATION 3

The PlayStation 3 can be connected via 2.4Ghz USB dongle and USB cable.

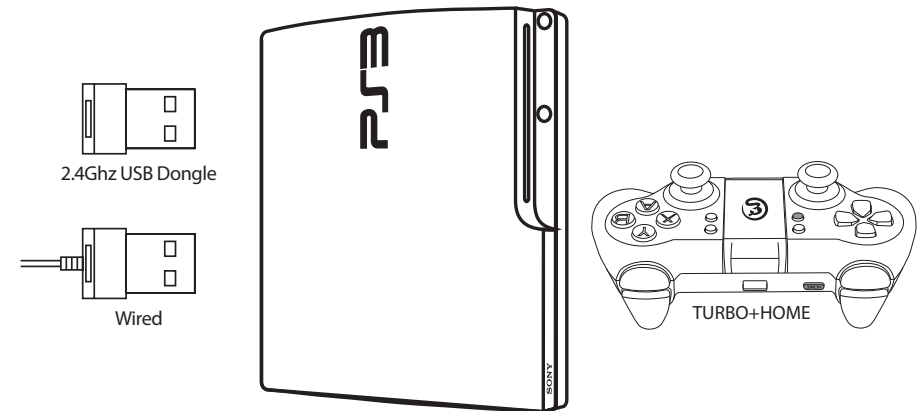


Connecting via 2.4Ghz USB Dongle: If this is your first time to connect your T1s to your PlayStation 3, pull out of the 2.4Ghz USB dongle from the front side of the controller, inserting the 2.4Ghz USB dongle into the USB port of your PlayStation 3, hold down “TURBO” and “HOME” button simultaneously for 2 seconds of your T1s, if the controller is connected successfully, the “TURBO” button light of your T1s will stay on and the game controller will shock slightly.

Wired Connection: If this is your first time to connect your T1s to your PlayStation 3, hold down “TURBO” and “HOME” button simultaneously for 2 seconds of your T1s, take out the USB cable included in your GameSir T1s package, plug one end of the cable in your T1s and plug the other end into a USB port of the PlayStation 3. Your T1s will be connected easily and quickly in that way. The “TURBO” indicator of your T1s will stay on and the game controller will shock slightly.

Please note that the controller will remember your last connection, if this is your second time to connect the same PlayStation 3 via 2.4Ghz USB dongle, and your T1s is not been connected to other devices between the first time and the second time, and your 2.4Ghz USB dongle stays connected to your PlayStation 3 from last time, you can hold down the “HOME” button of your T1s for 3 seconds, the controller will be paired to your PlayStation 3 automatically.

 AUTO FIRE FUNCTION

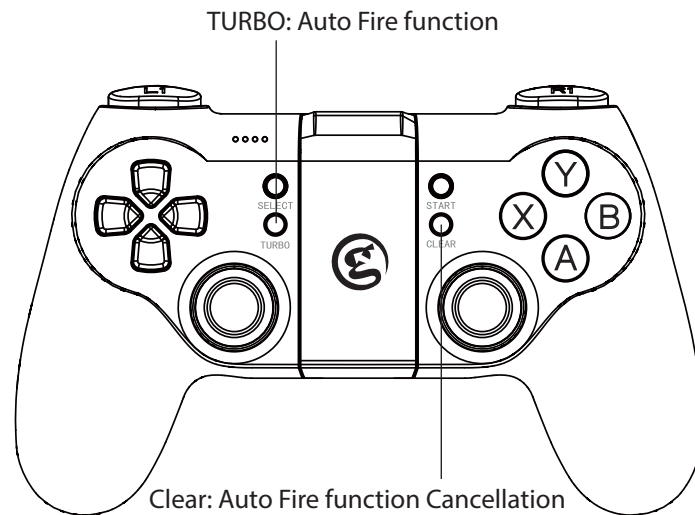

TURBO is used more in shooting games. Your fingers would easily get tired if you continuously press the same button (shooting button). With the TURBO, you can continuously shoot by holding the shooting button.

Setting Method

Press one or more buttons, (excluding D-pad, joysticks, SELECT, START button), and then press the "TURBO" button, to set TURBO function.

Clear TURBO

Press one or more buttons, and then click the " CLEAR " button to clear the TURBO.

DOWNLOAD T1S SUPPORTED GAMES

"GameSir World" is best app for your T1s. "GameSir World" is a free app available in Apple Store and Google Play. "GameSir World" is developed by GameSir with thousands of Smartphone games supported by GameSir gamepad. Every Android gamer and iOS gamer can grab their favorite mobile game easily now. The perfect combination of GameSir hardware and GameSir software brings the ultimate gaming experience to every GameSir's user. Compared to the retro games app "Happy Chick", "GameSir world" put emphasis on popular smartphone games for gamers' wide choice.



On Android Tablet, Smartphone, and Android TV, you can download "Happy Chick" to play thousands of free retro games. Go to <http://www.happychick.hk> to download "Happy Chick Emulator" on the homepage. You can also scan the QR code below to download the App on Android Tablet, Smartphone.



Download "Happy chick" and follow the instructions on the screen, open the emulator to download your games and play via your T1s.

Connect game controller to Happy Chick emulator to play games freely .

- Download "Happy Chick" from user manual or <http://www.happychick.hk> in your Smartphone.
- Open the Bluetooth in your Smartphone .
- Open "Happy Chick" emulator and click the controller icon on the right top
- Wait until two signals appear "Speed connection" and "Common connection". Choose " Speed connection".
- The game controller will get a vibration when it is connected .
- Downloading the free games from "Happy Chick Emulator", T1s can match all the games perfectly.

FREQUENTLY ASKED QUESTIONS

Q: What devices can GameSir T1s work with?

A: Android Smartphone / Android Tablet / NVIDIA Tablet / Android TV box / Windows PC / Samsung Gear VR / PlayStation 3

Q: What is the system Compatibility requirements for T1s?

A: Android 4.0 or later or Windows 7.0 or later.

Q: What is the connections of GameSir T1s?

A: 2.4Ghz USB dongle, USB cable, Bluetooth 4.0

Q: What games will work with the GameSir T1s controller on my device?

A: For Windows PC and PlayStation 3, T1s supports most of gamepad enabled games.

For Android Smartphone and Tablet, you can find a list of compatible games using the following links:
<http://www.gamesir.hk/> ---GameSir World.

Q: Do I need to install Driver when I connect to GameSir T1s to Windows PC?

A: When you connect the T1s to your windows PC, if the GameSir T1s can not recognize the driver of your computer system, the T1s will be recognized as XBOX 360 Driver. To solve the problem, we recommend that you follow these four steps here:

1. Connect your T1s to your Windows PC via USB cable provided in T1s package.
2. Download intelligent PC drivers manager "Drive the life" to your computer, this drivers manager will check and recommend the compatible driver needed to download for your GameSir T1s.
3. Installing the driver recommended by "Drive the life", when your GameSir T1s is recognized by your computer successfully, you can connect T1s to your PC through 2.4Ghz USB Dongle next time.
4. If the 3 steps above can not solve your problem, please try to install X360 gamepad software for systems below WinXP (including XP).

Q: Why the gamepad does not vibrate?

A: Check out whether the game support vibration, if the game support vibration, please check whether the vibration function is started in the game settings.

Q: What should I do when the gamepad can not be turned on or frozen?

A: When the gamepad can not be turned on or frozen, press the "Home" button to check the remaining power, if the gamepad is not out of battery, you can make the factory reset settings for the gamepad :

There is a small reset hole at the back of the gamepad, pressing the reset hole using a needle for 1 second to reset the gamepad. Then turn on your gamepad again.

Q: Does the gamepad support my games?

A: If you do not know if the game is controller compatible, go to www.happychick.hk to download "Happy Chick" app to find thousands of free games, or go to www.gamesir.hk and find "GameSir World" column.

The game list in GameSir world is updated frequently, your game is controller compatible if it is included in the game list.

FCC CAUTION STATEMENT

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(2) § 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(3) § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.